

	Trade Name	INCI Name	%	Supplier	Function
A	1 Nikkomulse WO	Cyclopentasiloxane, PEG-10 Dimethicone, Distearidimonium Hectorite	5.00	Nikkol Group	WO Emulsifier
	2 Nikkol Trifat S308	Triethylhexanoin	7.00	Nikkol Group	Emollient
	3 TCS-6701	Trisiloxane & Dimethicone	8.00	TINCI	Silicone
	4 TCE-3061	Cyclopentasiloxane, Dimethicone/Vinyl Dimethicone Crosspolymer	5.00	TINCI	Silicone elastomer
	5 Nikkol Sugar Squalane	Squalane	2.00	Nikkol Group	Moisturizer, emollient
	6 Plastic Powder D-400	HDI/Trimethylol Hexyllactone Crosspolymer, Silica	4.00	Nikkol Group	Wrinkles and pore
B	7 DI Water	Water	41.70		Diluent
	8 Magnesium Sulphate	Magnesium Sulphate	0.50		Stabilizer
	9 Glycerin	Glycerin	10.00		Humectant
	10 1,3 Butylene Glycol	Butylene Glycol	5.00		Humectant
	11 Dipotassium Glycyrrhizinate	Dipotassium Glycyrrhizinate	0.10	Nikkol Group	Anti Inflammation
	12 Troycare PE73	Phenoxyethanol, Ethylhexylglycerin	0.60	Troy	Preservative
C	13 Starmilk SA50	Water & Ethylhexyl Methoxycinnamate & Bis-Ethylhexyloxyphenol Methoxyphenyl Triazine & Diethylamino Hydroxybenzoyl Hexyl Benzoate & Glycerin & Inulin Lauryl Carbamate & 1,2-Hexanediol & Sodium Surfactin	8.00	Dermalab	UV filters
	14 Magicolor 140YP	CI77492(&) CI77891(&) Synthetic Fluorophlogopite(&) Zein(&) Silica Dimethyl Silylate (&) Zea Mays(corn)Starch (&) Hydrogenated Lecithin (&) Caprylic/Capric Triglyceride	1.1000	Biogenics	Colorant
	15 Magicolor 140RP	CI77491(&) CI77891(&) Synthetic Fluorophlogopite(&) Zein(&) Silica Dimethyl Silylate (&) Zea Mays(corn)Starch (&) Hydrogenated Lecithin (&) Caprylic/Capric Triglyceride	0.3500	Biogenics	Colorant
	16 Magicolor 140BP	CI77499(&) CI77891(&) Synthetic Fluorophlogopite (&) Zein(&) Silica Dimethyl Silylate(&) Zea Mays(Corn) Starch (&) Hydrogenated Lecithin (&) Caprylic/Capric Triglyceride	0.1500	Biogenics	Colorant
	17 Magicolor 150W	CI77891 (&) Zea Mays (corn) Starch (&) Polyglyceryl-10 Stearate	1.5000	Biogenics	Colorant

Procedure:

1. In separate vessel, dissolve A1 into oil phase and homogenise until lump free. Add in A6 and heat up the bulk to 75C.
2. Mix part B one by one and heat up to 75C.
3. Gradually add in part B into part A while homogenise for 15 minutes or longer time until emulsion formed.
4. Let the bulk cool down to <40C, premix part C and slowly mix in with paddle mixer at minimum speed around 300-500rpm.
5. Stir gently and avoid scrapping beaker wall.

Product Properties @ 25°C:

Appearance : Cream with breakable color beads(skin color)
 Viscosity (RVT, sp 5, 20 rpm): 8000-15000cps
 pH: NA

Stability Test:

- Passed 3 months RT and 45C oven test
- Passed centrifuge test: 3000rpm, 20minutes

Remarks:

Troycare PE73:Phenoxyethanol(70%), Ethylhexylglycerin (30%)



*Suggested active ingredients:

1. **Lemon Balm Extract RA**- Recovery effects on Endo180 synthesis under the influences of IL-1a induced by UVB irradiation
2. **Elix-IR**- Fight Infra'Aging



**MAGIC COLOR SHIFT UV
COVER CC CREAM
TN24078CC038**

Formulation Features:

Non tack WO emulsion with breakable magic color beads into skin color foundation after gently rub on skin.

Functional Ingredients:

Nikkomulse WO



- WO emulsifier, emulsifies various oils
- Enhances dispersion of particles such as powders or pigments
- Produces light, elegant and glossy texture

Plastic Powder D-400


- Wrinkles and pore blurring

TCE-3061

- Reduce tackiness of formulations, provide dry smooth and silky skin feel

Magicolor series

- Breakable beads, color changing after apply
- Good compatibility in high SPF formulation

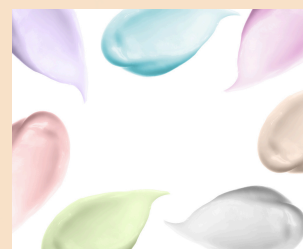

Contact Us
 csr@technecture.com

